This is the Internet version of the quick guide. © Print only for private use.

M600i
Quick Guide

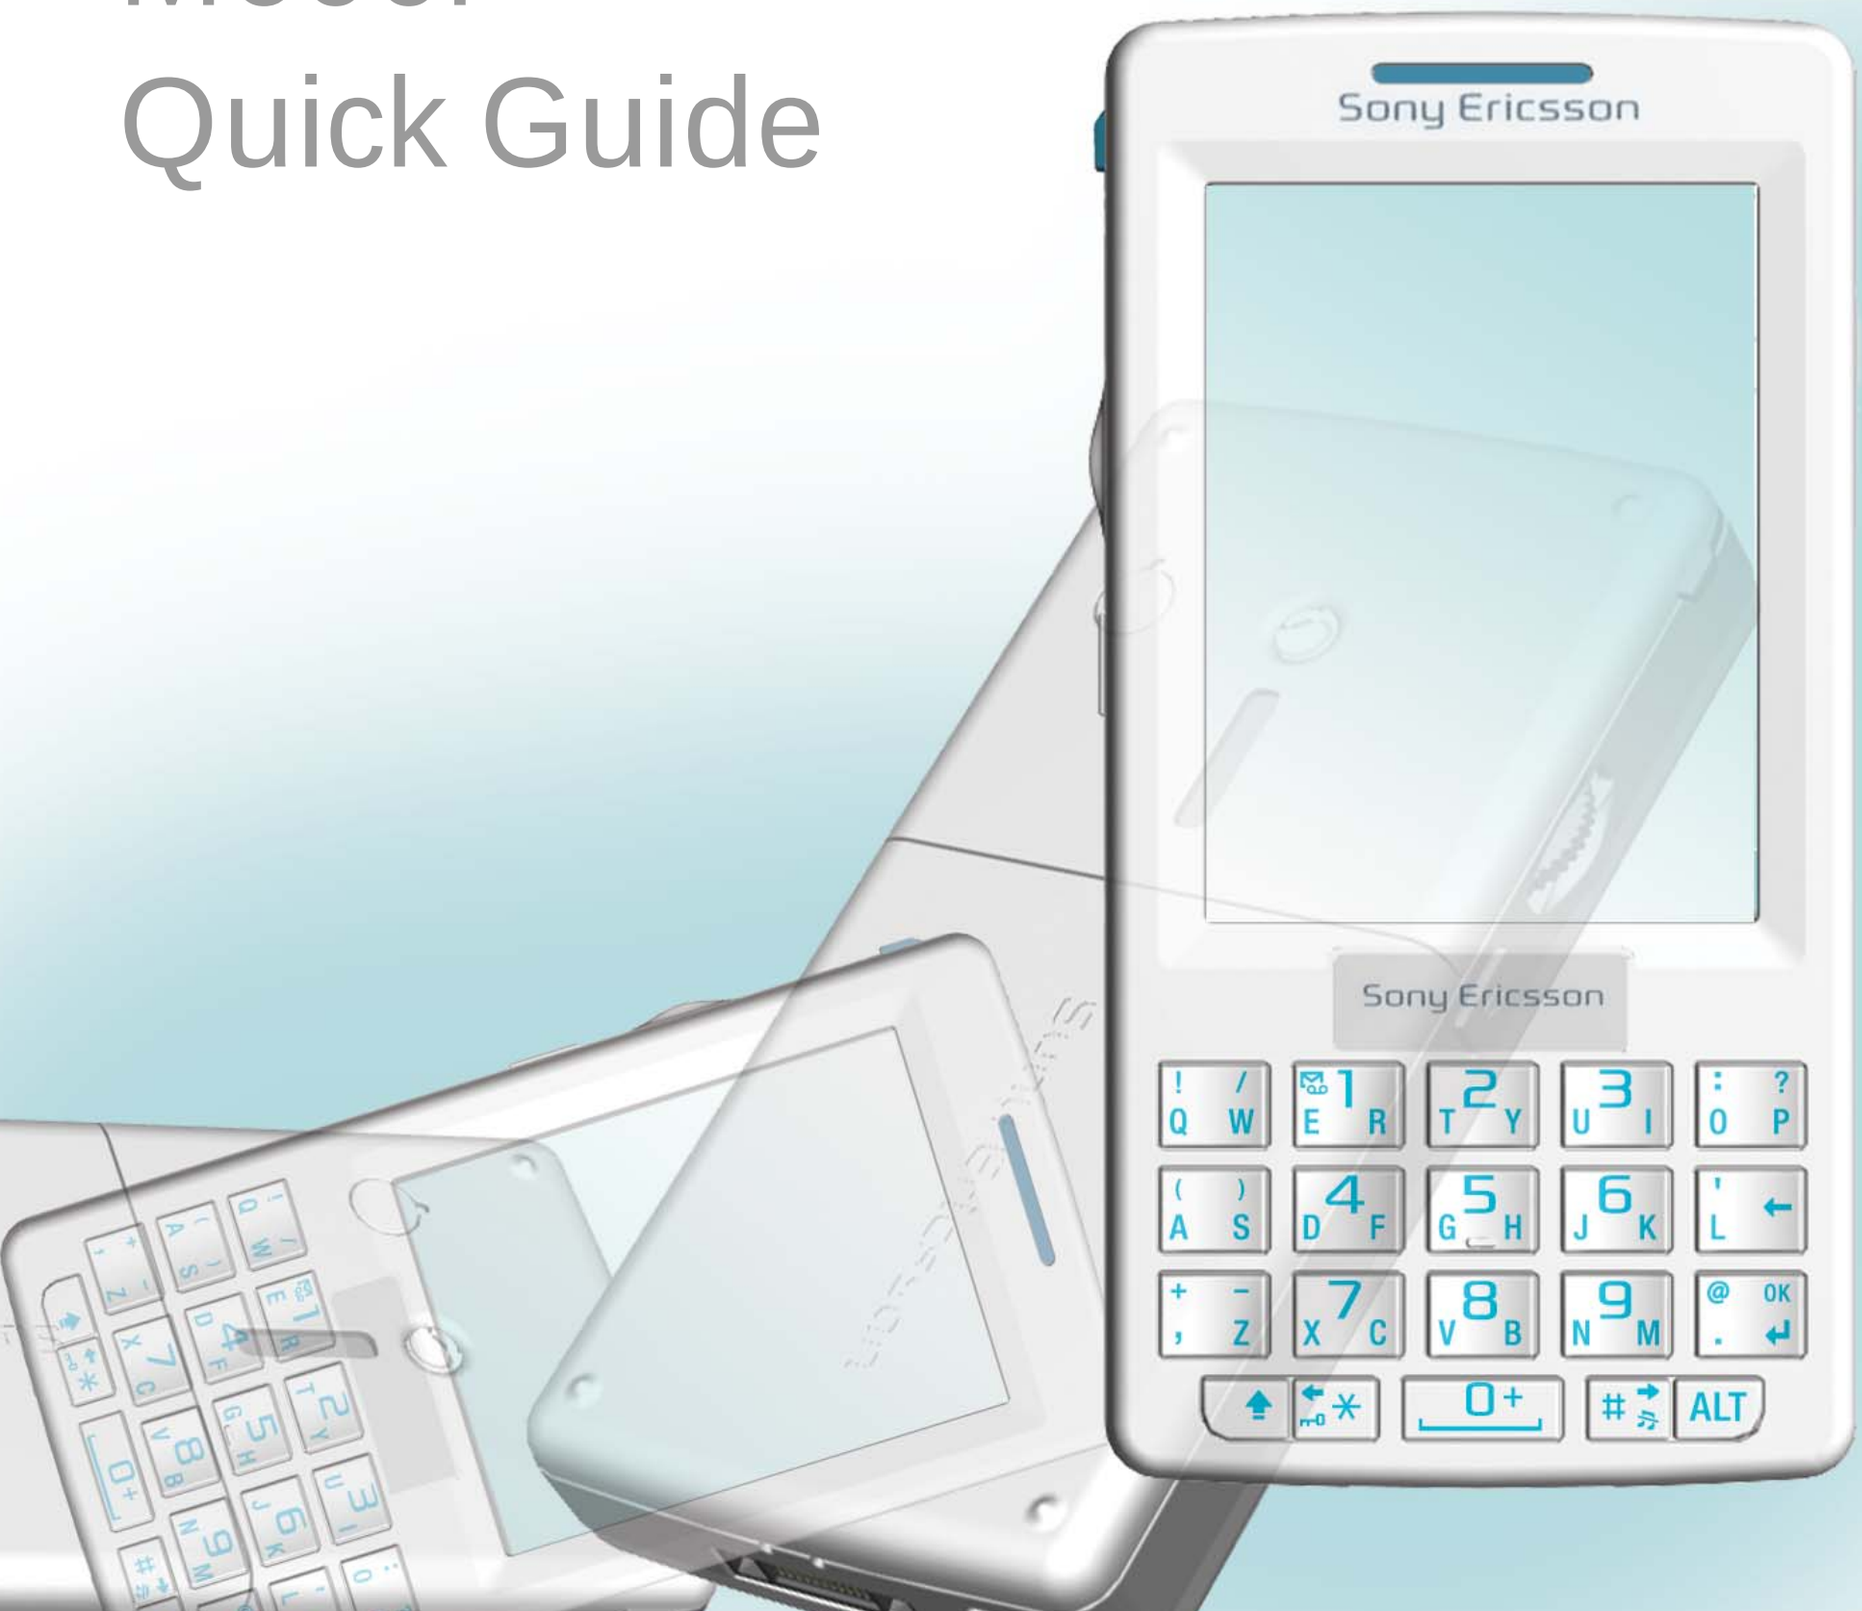

This is the Internet version of the quick guide. © Print only for private use.

SIM card and battery

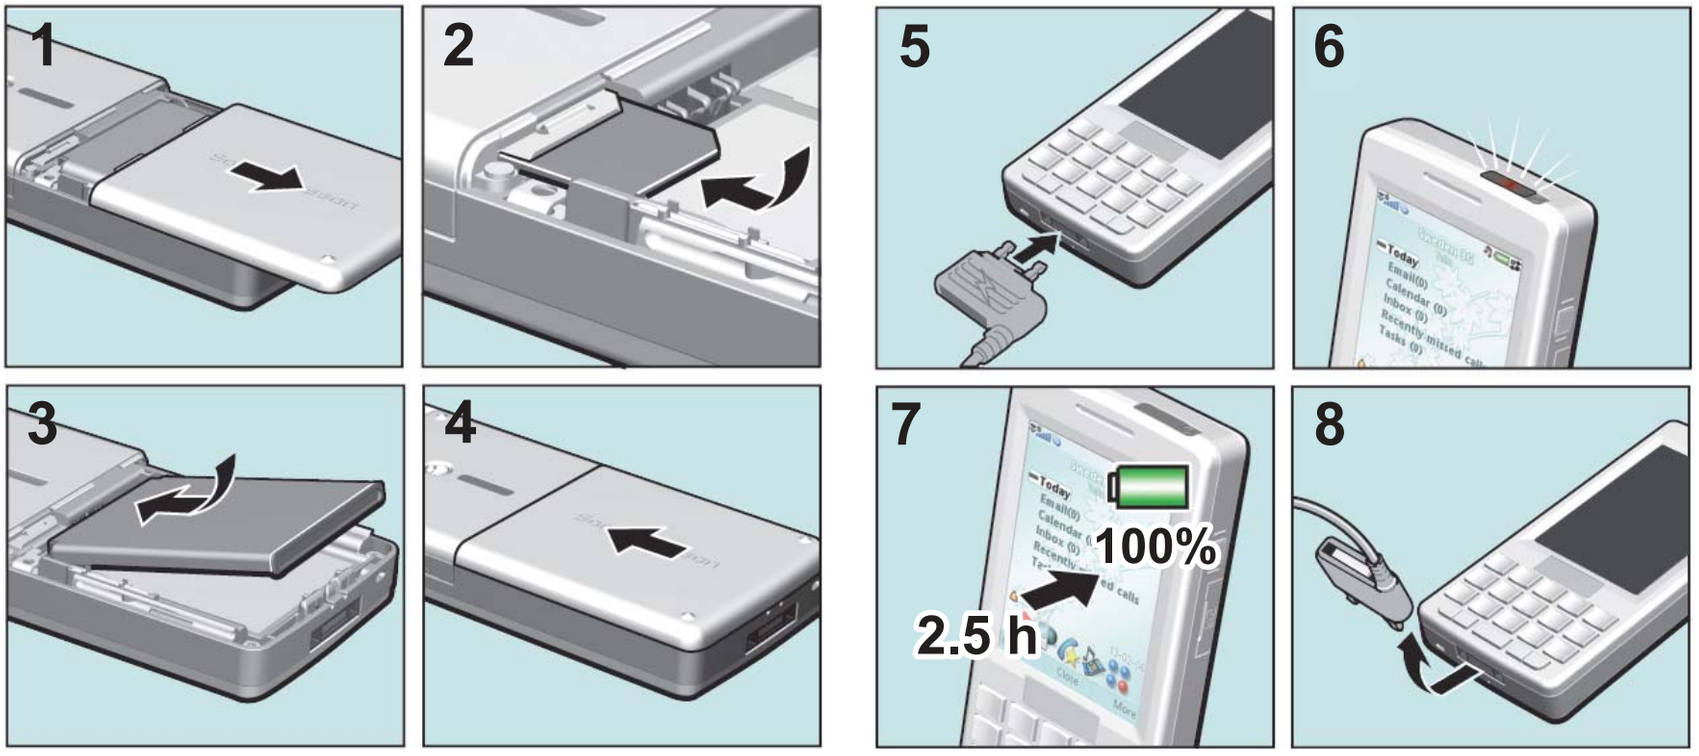

1. Remove the battery cover.
2. Insert the SIM card *under* the SIM ejector, with its contacts facing down.
3. Insert the battery with its label side up and contacts facing the phone's contacts.
4. Slide the battery cover back into place.
5. Connect the charger, with the symbol on the charger's connector facing up.
6. During charging, the infrared port indicator is on.
7. Wait about 2.5 hours for the battery to fully charge.
8. Remove the charger from the phone by tilting its connector upwards.

This is the Internet version of the quick guide. © Print only for private use.

Getting Started

Turning On Your Phone

1. Press and hold the On/Off button until you hear the welcome tone.
2. Select ***Phone on*** or ***Flight mode*** (where mobile phone use is prohibited).
3. If the ***Enter PIN*** dialog appears, enter the PIN code provided with your SIM card.

The first time you use your phone, a Setup wizard will help you enter its basic settings.

Making a Call

Using the keyboard, enter the phone number, then press ***OK*** or select ***Call***. You can also make calls from Contacts .

Navigation

To navigate menus and select items, use the Jog Dial and the Back button or tap the screen with your fingertips or the stylus.

Jog Dial

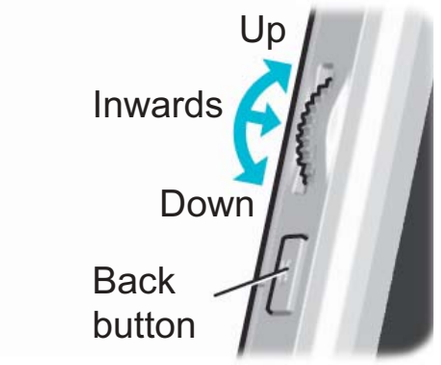

Rotate the Jog Dial to scroll up and down lists, adjust the sound volume, or move through a multimedia message. Press the Jog Dial to select a highlighted item.

Back Button

The Back button is located on the left side of the phone, next to the Jog Dial. You can use it, for example, to return to the previous menu or toggle between two menus. Pressing and holding the Back button locks the keyboard.

Stylus

Use the stylus to operate the touch-sensitive screen.

Keyboard

Your phone has a full alphanumeric keyboard, with dual function keys. Most of the keys have two characters located on

This is the Internet version of the quick guide. © Print only for private use.

the lower part of the key—press the left or right side of the key to enter the character you want. In text fields, you can enter the characters or symbols at the top of the key (for example, the numbers 1-9) by first pressing the ALT key.

Activity Menu

The Activity menu is displayed whenever you turn on your phone. It is the starting point for performing a variety of tasks and accessing applications from the Main menu.

Activity Menu Overview

A. Today's information. Check your unread email, missed calls, tasks, and upcoming appointments.

B. Shortcuts bar.

C. Touch options bar, including the More menu and various commands.

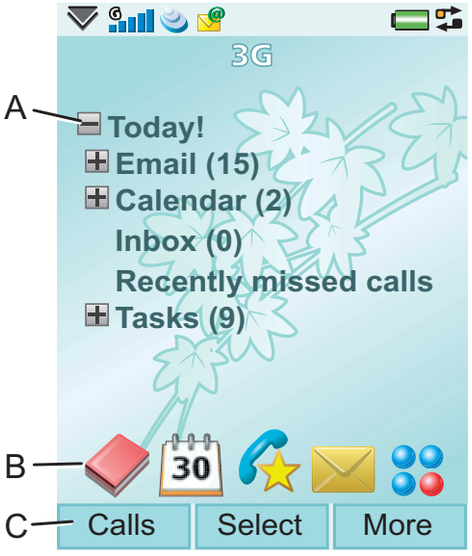

The Activity menu offers you an overview of the day's events and tasks (A). You can customize this overview in a number of ways, including selecting its headings. To explore your options, select ***Preferences*** in the ***More*** menu.

The Activity menu also includes shortcuts to common applications (B). You can change these predefined shortcuts to quickly launch your most frequently used applications and links. Using the Jog Dial, navigate to the shortcut you want to change, then select ***Replace*** in the ***More*** menu.

Multitasking

Your phone allows you to multitask. For example, while making a phone call, you can browse the Internet for the latest financial news. You can also have several applications open at the same time and simply switch between them using Task manager. When you leave an application using Task manager, rather than closing it, you return to the same view when you later switch back to the application.

To open Task manager, tap at the upper right corner of the screen. The last five applications you used are listed below the divider. To open an application from here, select ***Main menu***.

This is the Internet version of the quick guide. © Print only for private use.

Email and Push Email

We designed your phone to be a true mobile email device. Create, send, and receive email messages and invite people to meetings just as easily as you do from your office or home computer.

With your phone's push email application, email messages received in your computer's inbox are automatically forwarded to your phone. Some push email applications also keep your Calendar fully updated, with no need for additional synchronization. Constant access to your company’s global address book is another push email benefit. Please consult your email service provider for more information.

Downloading Settings

You can download settings for Internet/WAP browsing, email, and MMS messaging from your mobile network operator or Sony Ericsson. First, contact your mobile network operator.

To download settings from Sony Ericsson: From your computer, browse to *www.sonyericsson.com/support*, then follow the instructions.

Synchronizing

Using Bluetooth® wireless technology, an infrared connection, or the supplied USB cable, you can synchronize your phone contacts, appointments, tasks, and notes with the corresponding information on your computer. To do this, you must install and use the software found on the PC Suite CD included with your phone.

For more information on synchronization, please see the User's Guide or Web Guide at *www.sonyericsson.com/support*.

Memory Stick Micro™

A Memory Stick Micro™ (M2™) provides extra storage space for pictures, music, applications, and documents.

Your phone comes with a Memory Stick™ already inserted. If you want to remove it, open the cover, then press the edge of the Memory Stick™. To reinsert the Memory Stick™, press it into the slot, contacts facing down, until it snaps into place.

This is the Internet version of the quick guide. © Print only for private use.

Added dimensions – Accessories from Sony Ericsson

Bluetooth® Headset HBH-GV435

Clear sound and lasting comfort

Desk Stand CDS-60

Your phone’s best assistant: connect a USB cable, charger, or portable handsfree

Advanced Car Handsfree HCA-60

Excellent stereo sound for voice and music in your car

This is the Internet version of the quick guide. © Print only for private use.

Congratulations on your purchase of the Sony Ericsson M600. Enjoy the fast touchscreen, efficient email tools, and high-speed Internet on the go. In addition to your pre-installed multimedia content, a lot more is waiting for you at *www.sonyericsson.com/fun*. Also check out the Sony Ericsson Application Shop at *www.sonyericsson.com/applicationshop* and learn how to get the most out of your M600.

And if you register at *www.sonyericsson.com/register,* you get an exclusive offer.
Go now and don't miss out.

This is the Internet version of the quick guide. © Print only for private use.

Transferring Contacts from an SIM Card

You can easily transfer valuable contact information from an old SIM card to your new phone.

Copying from an SIM Card to Contacts

1. Select ***Contacts***.
2. In the ***More*** menu, select ***View folder > SIM*** to open the SIM card.
3. Mark the entries you want to copy.
4. In the ***More*** menu, select ***Copy to Contacts***.

Try & Buy Applications

Your phone's Memory Stick™ contains a wide variety of Try & Buy applications for business and entertainment uses. It also includes information on how to purchase the applications.

For additional software, visit the Sony Ericsson Application Shop at *www.sonyericsson.com/applicationshop*.

For copyright, trademark, and legal information, see the User's Guide.

AE/LZT 162 039 R1A